



## HEIGHTS KEY LOCK & SAFE

920 San Mateo NE Albuquerque, NM 87108

[Contact us for more information](#)

[Home Page](#)



## GARDLOK ES300 by Winfield lock / Saflok

The GardLok is an electronic push button lock designed to retrofit existing Adams Rite locks installed on narrow stile aluminum frame doors. **Ten different access combinations** can be programmed for lock access. User's access can be easily change or blocked.



---

### Low Battery Warning

**THERE IS NO "POWER OVER-RIDE" OR "KEY OVER-RIDE" FOR THIS LOCK. IT IS VERY IMPORTANT TO KNOW THE LOW BATTERY WARNING SIGNS!**

- **Stage 1** - Codes will need to be entered twice to trigger lock followed by eight (8) rapid beeps. This will only occur for 20 openings.
- **Final Stage** - Codes will need to be entered three (3) times before the lock will open. If the battery is not changed the lock will eventually stop working

---

### To enter a New Master Code

**The Master Code is always stored in key '1' of the lock. All other nine combinations are stored in keys 2 to 0.**

1. Press & hold the '0' key until the lock beeps twice
  2. Enter existing Master Code (factory default is 111111) followed by the '1' button - *the lock will beep twice.*
  3. Enter a new 6-digit Master - *the lock will beep twice.*
  4. Re-enter the new Master code to confirm - *a long beep will sound indicating a successful change.*
-

## To Add or Change a User Code

**Each User Code is stored in one of the remaining nine keys (2 through 0).**

1. Press & hold the '0' key until the lock beeps twice.
2. Enter Master Code - *the lock will beep twice.*
3. Press the key to assigned to this user (2 through 0) - *the lock will beep twice.*
4. Enter 6-digit User Code - *the lock will beep twice.*
5. Re-enter 6-digit User Code - *a long beep will sound indicating a successful add/change.*

---

## To Enable or Disable a User Code

1. Press & hold the '0' key until the lock beeps twice.
2. Enter Master Code - *the lock will beep twice.*
3. Press the key to assigned to the user you want to disable (2 through 0) - *the lock will beep twice.*
4. Choose one of the following
  - a. To Disable a User Code - Press and hold the '2' button until the lock beeps twice indicating the Users Code is disabled.
  - b. To re-enable a User Code - Press and hold the '4' button until the lock beeps twice indicating the Users Code is enabled.

